




# Instructions

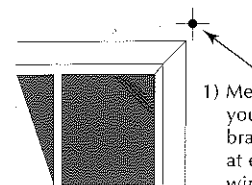


- 1) Measure the positions you require the brackets to be fitted at either side of the window frame.

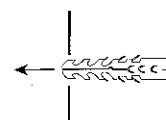

- 2) Drill the relevant holes and insert the wall plug supplied in the pack.

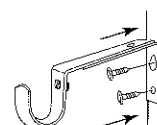


- 3) Attach the bracket securely in place with the screws provided.

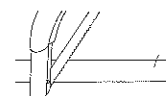


- 4) Measure the pole and cut to the required length if necessary.


Please note: when resizing poles that require a joiner ensure both poles are cut equally.

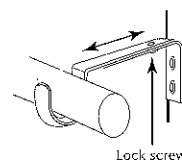

- 5) Place the pole in position. Adjust the bracket length as required. Secure the locking screw.

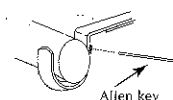

- 6) Using the allen key supplied tighten the grub screw to secure the pole in place.

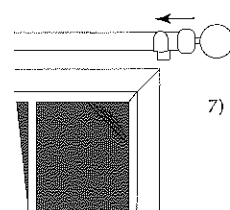

- 7) Attach the finials onto the pole and secure by tightening the grub screw.

28mm curtain pole,  
rings, finials & brackets



**Environmental  
Information**

This pack uses no staples or plastics and is manufactured in PET materials which can be recycled in any plastic recycling facility.

The inlay card can be put into any paper recycling facility.